www
TIME CLOCK WORLD
888 534-5994

www
TIME CLOCK WORLD
888 534-5994

HOW TO PRINT PARAMETER SETTINGS USING A MODEL 7000E

STEP 1:
Removing Top Cover

Unlock cover. Hold the left and right sides of the cover and lift up.

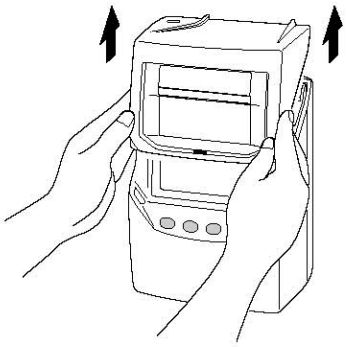

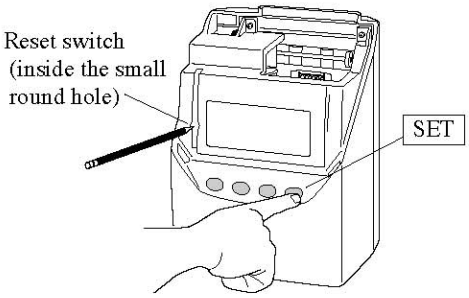

Step 2 (illustration)

STEP 2:
Activating "Parameter Print" Mode

Press and hold the right control button (4th), and press reset switch simultaneously while holding down right control button. Display goes blank.

Release Reset button first then release right-side button. Display will show (1P) and (1).

STEP 3:
Print Time Card

Insert time card. The clock will print parameters on time card as shown on right..

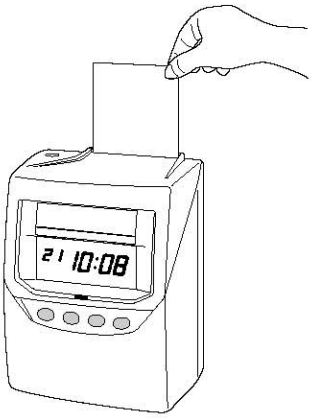

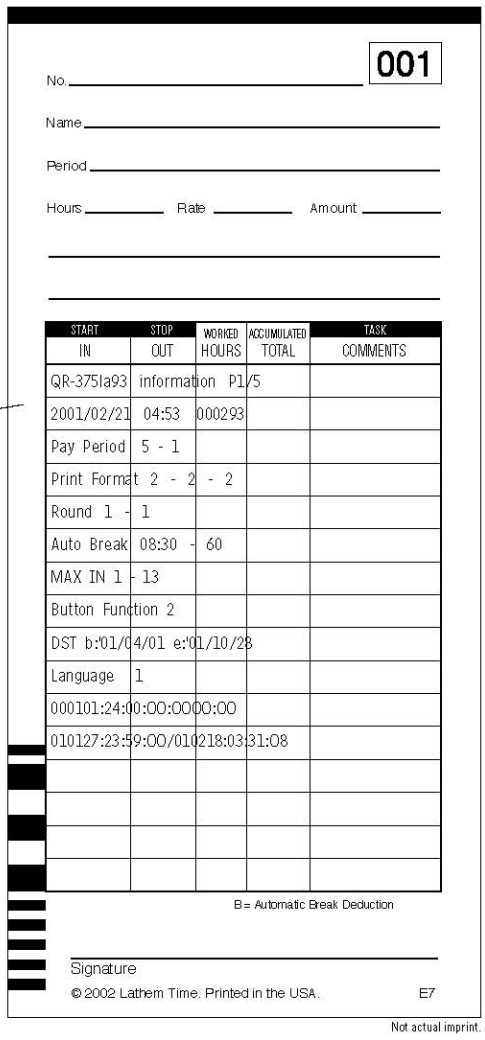

No. 001

Name

Period

Hours Rate Amount

START IN	STOP OUT	WORKED HOURS	ACCUMULATED TOTAL	TASK COMMENTS
QR-3751a93	information	P1/5		
2001/02/21	04:53	000293		
Pay Period	5 - 1			
Print Format	2 - 2	- 2		
Round 1 -	1			
Auto Break	08:30 -	60		
MAX IN 1 -	13			
Button Function	2			
DST b:01/04/01 e:01/10/28				
Language	1			
000101:24:00:00:0000:00				
010127:23:59:00/010218:03:31:08				

B= Automatic Break Deduction

Signature

© 2002 Lathem Time. Printed in the USA. E7

Not actual imprint.

STEP 4:
Exit "Parameter Print" Mode

Press and release Reset Switch (see illustration in step 2 for location of Reset Switch). Normal operation will resume.

STEP 5:
Replacing Top Cover
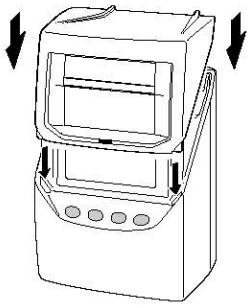
Fit the plugs on both sides of cover into the holes located on the unit of the body. Then push down while pulling the cover slightly forward.